 


CBS **COLECO**™
VISION

VIDEOGAMECOMPUTER

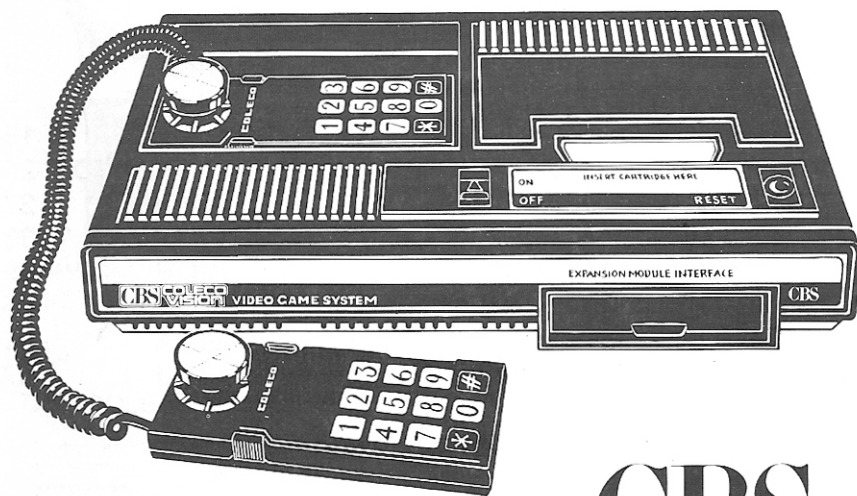


CBS
ELECTRONICS

ENGLISH INSTRUCTIONS
SPIELANLEITUNG IN DEUTSCH
MODE D'EMPLOI EN FRANÇAIS
NEDERLANDSE GEBRUIKSAANWIJZING
ISTRUZIONI IN ITALIANO
INSTRUCCIONES EN ESPAÑOL
DANSK BRUKSANVISNING
NORSK BRUKSANVISNING
SVENSKA INSTRUKTIONER
SUOMENKIELISET KÄYTTÖOHJEET

ColecoVision.dk

CBS COLECOVISION™


VIDEOGAMECOMPUTER

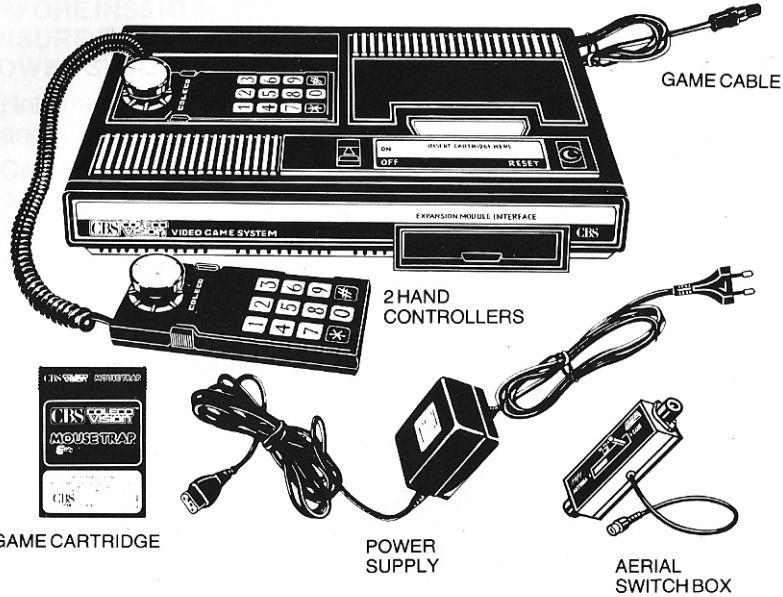

CBS COLECOVISION is for colour television viewing only.

SPECIAL NOTES


- 1 An aerial switchbox is provided with the CBS ColecoVision console. The aerial switch box unit allows you to connect both the game aerial lead and your television aerial lead to the TV set simultaneously.
- 2 This product should only be assembled by an adult.

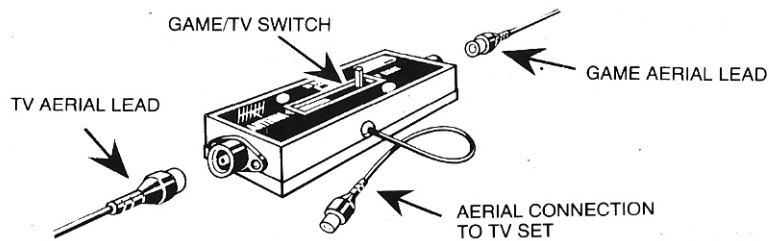

ColecoVision.dk

CONNECTING THE CONSOLE PARTS

- 1 Plug the game aerial cable to the aerial switchbox at the socket marked Game. Plug the aerial cable leading from the aerial switchbox into the TV aerial socket located in the TV set.
- 2 Move the select switch on the aerial switchbox to Game. (Remember that after playing with your CBS ColecoVision games, move the switch back to TV for normal TV viewing).
CAUTION: For the best transmission of games ensure that the switch is moved fully to Game position.
- 3 Ensure that the ON/OFF switch on your CBS ColecoVision console is turned OFF. Plug in the power supply jack to the back of the console unit.
- 4 Attach the hand controllers by plugging them into the appropriate jacks inside the hand controller storage compartment, as shown. Take care to ensure that the hand controller jack is inserted correctly (see diagram).
- 5 Insert the plug attached to the transformer unit into a 220 volt household electrical socket. Make sure the plug is fully inserted in the socket.
- 6 Turn the CBS ColecoVision game on.
- 7 Select a free channel on your t.v., locate the fine tuning control of your t.v. and use this control to tune the channel to the frequency of the console. If however you receive interference the console to the other channel and fine tune your t.v. to this frequency.

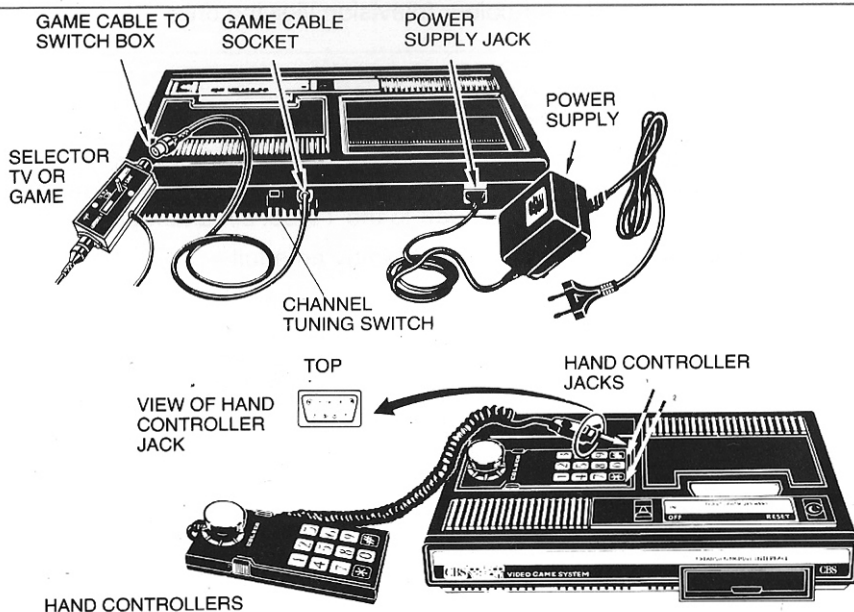


INSERTING THE CARTRIDGE

BEFORE INSERTING OR REMOVING THE CARTRIDGE ALWAYS ENSURE THAT THE CBS COLECOVISION CONSOLE UNIT POWER SWITCH IS TURNED OFF.

- 1 Hold the Game Cartridge so that the name of the game is facing you and reads right side up.
- 2 Carefully insert the Game cartridge into the slot on the righthand side of the console unit (see illustration). Insert the cartridge until it is fully seated. Do not force.

Before removing the Game Cartridge remember to switch the console power switch to OFF. Then simply push the cartridge straight up and out of the console unit. The power switch on the console unit should be turned off when the game is not in use.

Note: When Game Cartridge is inserted in the console unit, and the unit switched on, it is possible to make **Fine-Tuning** adjustments to your TV Set to ensure the best possible colour, contrast and sound settings.

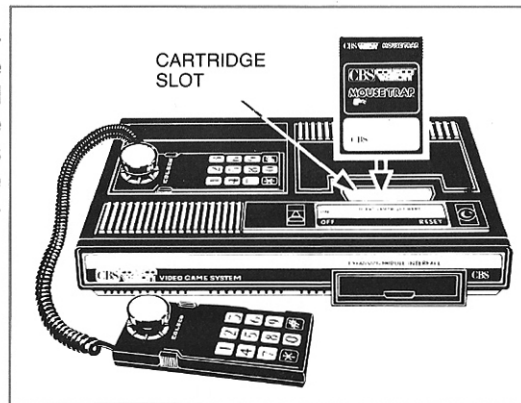

TO START PLAY


- 1 Turn on your TV set. Ensure that the correct channel is selected for the operation of your CBS ColecoVision videogame (see special note 7 on pag 4). Ensure that the aerial switchbox is switched to game.
- 2 Slide the power switch on the console unit to ON.
- 3 Press the game 'reset' button and the game title will appear on your TV screen. Adjust your fine tuning controls to a pleasing level. Wait for approximately 20 seconds for game level selection to appear.
- 4 Refer to your Game Cartridge Instruction Guide for detail of game play options.

5 When returning to normal TV viewing follow this procedure

- a) Switch console OFF
- b) Slide the aerial switch box to TV.
- c) Always switch off and unplug game transformer unit from household 220 volt electrical socket.

Warning: Always unplug the power supply from the 220 volt outlet when you have finished playing

POWER SWITCH RESET SWITCH

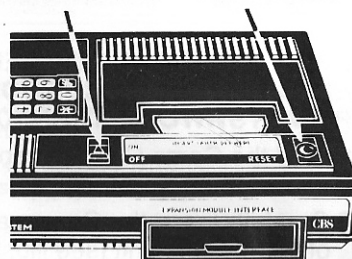

HAND CONTROLLERS


1 KEYPAD: Keypad Buttons 1-8 allow you to select a GAME Option before beginning to play. Pressing ★ after a game allows you to replay the same Game Option; pressing # after a game allows you to return to the Game Option screen. The keypad has additional uses for some games.

2 CONTROL STICK: The eight-directional control stick allows you to direct movement of an object depending on the game cartridge.

3 SIDE BUTTONS: Side Buttons have varying functions, depending on the game cartridge.

4 OVERLAY KEYPAD: Some cartridges come with an overlay, which slides into the Hand Controller as shown. Store into cartridge when not in use.

Each cartridge comes with its own detailed instructions for game play.

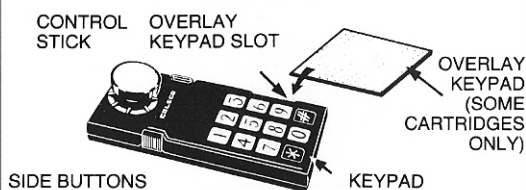

CARE OF THE GAME

Treat your CBS ColecoVision™ GAME with care

Before inserting or removing GAME CARTRIDGE, always make sure that the POWER SWITCH on console unit is turned "OFF".

Always unplug the POWER SUPPLY from the 220 volt outlet when you have finished playing. **Important: Only connect the console**

POWER SUPPLY UNIT INTO A 220 VOLT HOUSEHOLD ELECTRICAL OUTLET, OTHERWISE SERIOUS DAMAGE MAY OCCUR TO ELECTRICAL PARTS OF THE SYSTEM.

Do not drop or bang CONSOLE unit or HAND CONTROLLERS.

Do not force CONTROL STICK or bang on KEYPAD.

Do not use sharp or pointed object to activate KEYPAD Buttons.

Do not store or leave CONSOLE unit and accessories where they may be subject to heat build-up.

Do not force GAME CARTRIDGE in CONSOLE unit.

Keep GAME away from heat and moisture. Do not immerse CONSOLE unit or HAND CONTROLLERS in water. To clean, use a soft, slightly damp cloth to wipe CBS ColecoVision™ CONSOLE unit, HAND CONTROLLERS and CARTRIDGES.

DO NOT ATTEMPT TO REPAIR GAME. IT DOES NOT CONTAIN ANY OWNER SERVICEABLE PARTS.

WARNING: Before cleaning console unit and accessories, turn POWER SWITCH to "OFF" and disconnect the POWER SUPPLY unit from the 220 volt wall outlet.

TROUBLESHOOTING

SYMPTOM	REMEDY
<input type="checkbox"/> No GAME image on your TV screen <input type="checkbox"/> Faint TV image or blurry	<input type="checkbox"/> Aerial switch box not set to "GAME" position or Game Cable not properly plugged in at Console or Aerial Switch Box. <input type="checkbox"/> Aerial lead not properly attached. Follow instructions. <input type="checkbox"/> Power Switch on console unit not "ON". <input type="checkbox"/> TV tuned incorrectly <input type="checkbox"/> Game Cartridge not properly inserted or fully seated in slot. <input type="checkbox"/> Game Cartridge inserted into Console unit when POWER SWITCH was "ON". Slide the POWER SWITCH to "OFF", then back to "ON".

<input type="checkbox"/> No Game sounds	<input type="checkbox"/> TV volume not turned up. Adjust your Volume Control to a normal level. <input type="checkbox"/> Adjust your Fine Tune Control.
<input type="checkbox"/> Buzzing sound or Distortion Sound	<input type="checkbox"/> Adjust your Fine Tune Controls until the sound and picture are clear.
<input type="checkbox"/> No normal TV Programmes	<input type="checkbox"/> Move the "SELECT SWITCH" on Antenna Switch Box back to "TV" for regular viewing. <input type="checkbox"/> Connections on Antenna Switch box or TV set not properly connected. Follow the instructions.
<input type="checkbox"/> Stripes, lots of dots	<input type="checkbox"/> Adjust the Horizontal Hold located on front, side or rear of TV set. <input type="checkbox"/> Reduce Colour Intensity. <input type="checkbox"/> If Picture WAVES, adjust Fine Tune and Contrast Controls until a sharp, steady picture is obtained.
<input type="checkbox"/> Hand Controller not functioning correctly.	<input type="checkbox"/> Check and see if the Controller Jack is firmly seated in the socket of the Console unit. <input type="checkbox"/> If the other hand controller is working correctly, simply switch the working controller and firmly insert the jack into the non-working plug. If working controller fails to work correctly, the Console unit is probably faulty. If working controller works properly in other jack, the first controller is probably faulty. See service manual. <input type="checkbox"/> Game option selected for one player only. Wrong hand controller being used.